



Product: Toce™ Honda CBR1000 Razor Tip Slip-On Exhaust
Year: 2017-2019 **Make:** Honda **Model:** CBR1000RR



Parts List

Exhaust Canister Assembly	1
Hardware	
T-Bolt Clamp	1
M8 Bolt	1
Servo Buddy	(optional) 1


ATTENTION: We strongly recommend that a qualified motorcycle mechanic installs this product. If you have any doubts as to your ability to perform this installation, please consult with a dealer or repair shop. Be sure to read all instructions before starting

Installation Instructions

Remove plastic servo cover from underside of the tail section.



1. Disconnect cable from servo.

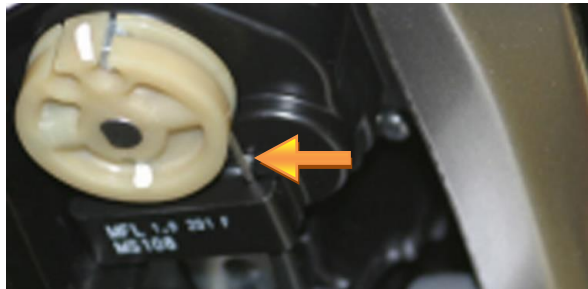

2. Remove OEM muffler assembly.



3. Install the Toce mid-pipe with the T-Bolt clamp on the header.
4. Connect muffler until the mounting bracket lines up with the foot peg bracket.
5. Using the supplied 8mm bolt, fasten the exhaust to the foot peg bracket & tighten T-Bolt clamp.
6. **Install Servo Buddy into harness to prevent FI/Check Engine Light under rear seat.**

Enjoy the ride!

Thank you for your purchase!

If you need further assistance please check out our Facebook or YouTube channel for video instructions. Or call us directly at the number listed above. We hope you follow us on Instagram, like us on Facebook or leave a review: we would love to hear your feedback.