

TOCFE Performance

2008-2014 Honda CBR1000RR Installation Instructions

Parts List
1 Shield
2 Mounting Brackets
3 M5 Button Allen Key Screws
3 Black Nylon Washers
3 Stainless Steel Flat Washers
3 M5 Stainless Steel Lock Nuts

Once you have your Toce exhaust installed;




Step 1. Install the small bracket behind the right fairing using stock fairing bolt.



Step 2. Install the forked end of the large bracket behind the 8mm exhaust bolt.



Step 3. Install the shield using supplied hardware to the mounting brackets.

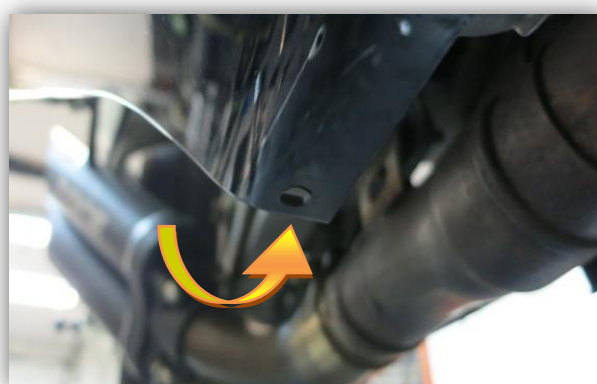

Step 4. Once the shield is in position, mark and drill a 6mm hole in the small lip on the bottom of the lower fairing.